

```

/*****/
/*!
@file      MQ135.h
@author    G.Krocker (Mad Frog Labs)
@license   GNU GPLv3
@section   HISTORY

v1.0 - First release
*/
/*****/
#ifndef MQ135_H
#define MQ135_H
#if ARDUINO >= 100
  #include "Arduino.h"
#else
  #include "WProgram.h"
#endif

/// The load resistance on the board
#define RLOAD 10.0
/// Calibration resistance at atmospheric CO2 level
#define RZERO 65
/// Parameters for calculating ppm of CO2 from sensor resistance
#define PARA 116.6020682
#define PARB 2.769034857

```

- Rzero is the value of the resistor in the MQ-135 sensor in the presence of clean air. Where the CO<sub>2</sub> value is around 397.13 ppm as given below. The Rzero value varies for each individual sensor and can be found using another Arduino code
  - RLOAD meanwhile is the external resistor value that is connected to the MQ-135 sensor, which in this case is 10kΩ.
  - Important parameters are for calculating CO<sub>2</sub> of 116.6 and 2.79 are taken from a calibration graph. This is already predefined for each gas that MQ-135 detects.
- amc2021:extras:screenshot\_2021-09-03\_at\_01.11.54.png

```

/// Parameters to model temperature and humidity dependence
#define CORA 0.00035
#define CORB 0.02718
#define CORC 1.39538
#define CORD 0.0018

/// Atmospheric CO2 level for calibration purposes
#define ATMOCO2 397.13

class MQ135 {
private:
  uint8_t _pin;

public:
  MQ135(uint8_t pin);

```

```
float getCorrectionFactor(float t, float h);  
float getResistance();  
float getCorrectedResistance(float t, float h);  
float getPPM();  
float getCorrectedPPM(float t, float h);  
float getRZero();  
float getCorrectedRZero(float t, float h);  
};  
#endif
```

From:

<https://student-wiki.eolab.de/> - HSRW EOLab Students Wiki

Permanent link:

<https://student-wiki.eolab.de/doku.php?id=amc2021:mq-135:start&rev=1630624776>

Last update: **2023/01/05 14:38**

