

Portable Weather Station Documentation

Autors: Daniel Jose Centeno Gonzalez & Lorena Garcia Plaza

Introduccion

A portable weather station offers portability, accurate data, and enhanced safety. It can be easily transported to different locations, providing precise and localized forecasts. This helps in decision-making for various activities and sectors. The station's portability enables monitoring of essential parameters, alerting users to potential weather hazards in advance. With measurements of temperature, humidity, thermal sensation, wind speed, wind direction, UV index, rain fall and then you can process the data and analyze it. In this documentation, you will find everything about this project.



Fig.: HSRW Portable Weather Station

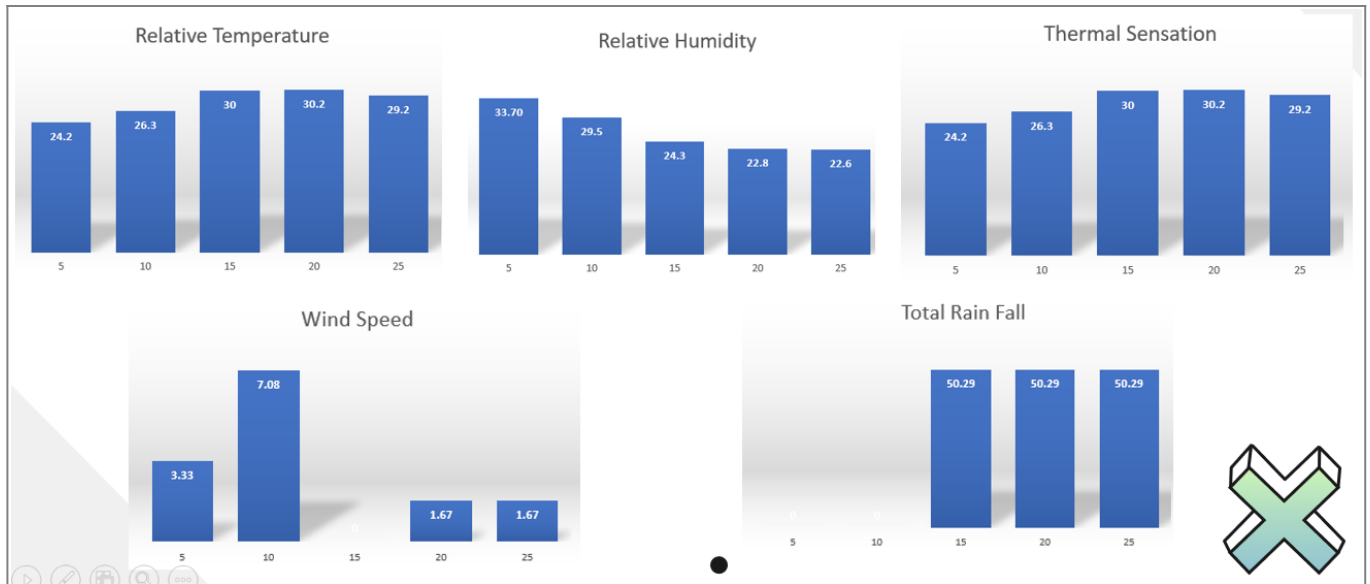


Fig.: Portable Weather Station Data Visualization

Weather Station Sensors

Measurement	Sensor	Measurement unit	Datasheet
Temperature	DHT22	°C	DHT22
Humidity	DHT22	RH	DHT22
Thermal sensation	DHT22	°C	DHT22
Wind Direction	Sparkfun Weather station kit (SEN-08942)	Cardinal Points	SEN-08942
Wind Speed	Sparkfun Weather station kit (SEN-08942)	m/s	SEN-08942
Rain Gauge	Sparkfun Weather station kit (SEN-08942)	mm	SEN-08942
UV index sensor	P1918 UV sensor	1-11	P1918 UV sensor

Electric diagram

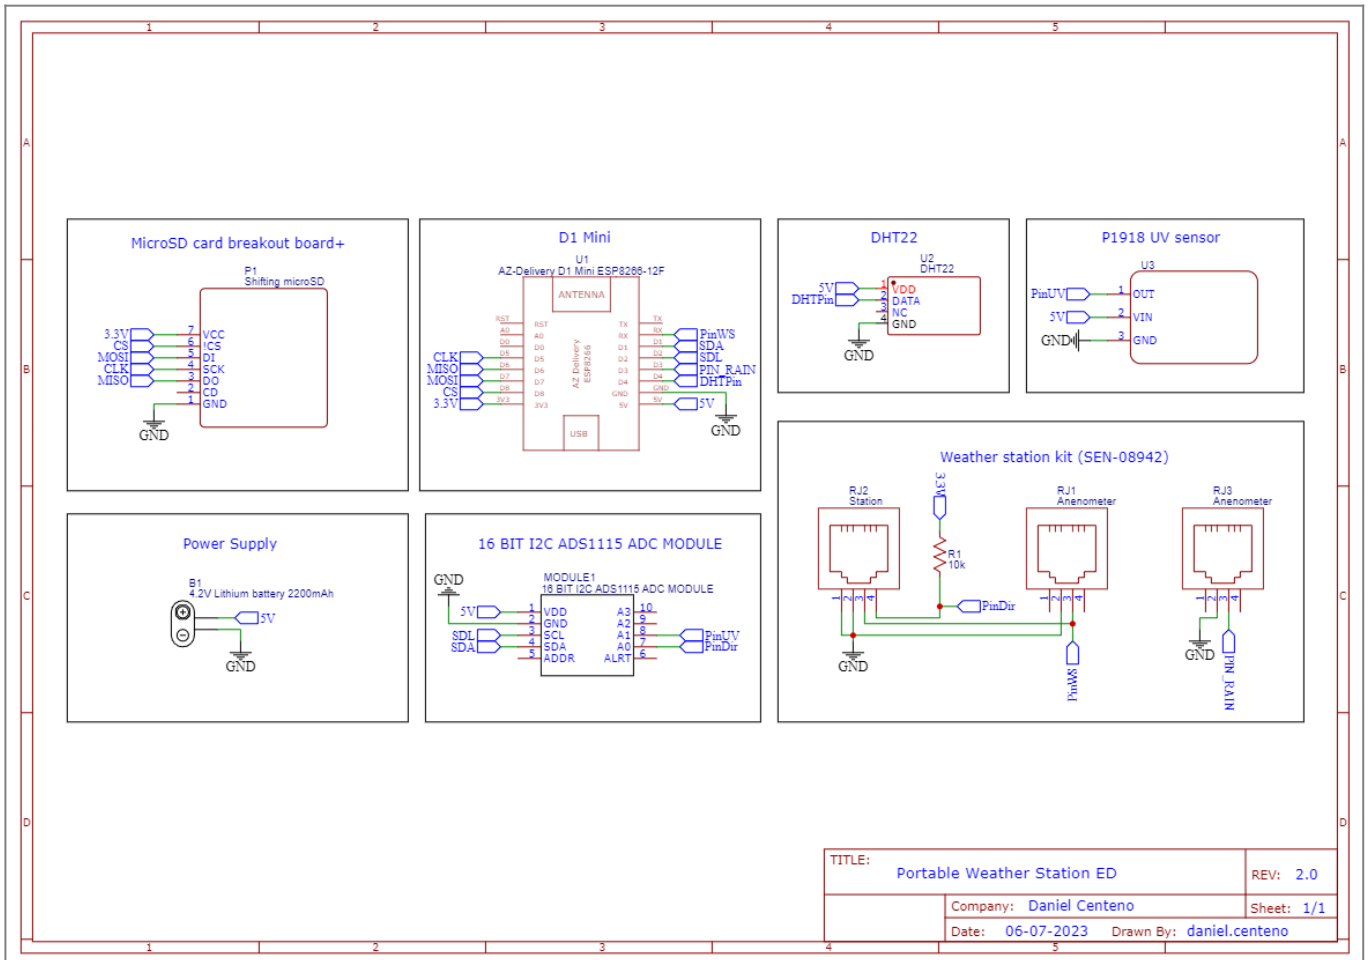


Fig.: HSRW Portable Weather Station Electric diagram, You can download the pdf diagram [Here](#)

Real Time Data Visualization

Portable Weather Station

MEASUREMENT	VALUE
Relative Temperature:	29.60 °C
Relative Humidity:	21.30 RH
Thermal Sensation:	29.60 °C
Total Rain Fall:	50.29 mm
Wind Speed:	0.83 m/s
Wind Dir:	SE
UV Intensity:	1

The data of our weather station is **freely available!**

We provide one channel to access the data:

Network: realme
 Password: 1234567810
 IP: 192.168.196.150

Fig.: HSRW Web Server Portable Weather Station

Logic Code

The logic of the program is divided into 5 important functions of which 4 of them are in charge of carrying out the measurement and calculation of the different values of each sensor and the last remaining one in the storage of the data in the MicroSD. Separating each function in this way we can create a multiprogramming environment which is extremely important in this type of project that uses many resources at the same time. This will also create a list and proper times of each component. For example, data can be stored in the SD while a user connects to the server. These processes will never be interrupted thanks to the task manager created with the `millis()` function.

Sensor Readings:

read_Temp_Humi(): This function is responsible for measuring temperature and humidity using the DHT22 sensor. First, the humidity and temperature are read in degrees Celsius. If the reading from any of the sensors is invalid, an error message is displayed on the serial port. In addition to obtaining the measurements, the thermal sensation (heat index) is also calculated using the Steadman formula, which takes humidity into account to estimate how the human body perceives temperature.

getRainfall(): The `getRainfall()` function takes care of measuring the amount of rain that has fallen. For this, a rain gauge is used, which records the number of times the rain causes a mechanism to activate (in this case, the `countRain()` function). Each time the mechanism is activated, a counter representing the number of times it has rained is incremented. The `getRainfall()` function takes the value of the counter and converts it to a rain measurement in millimeters, considering a relationship between the activations and the amount of rain.

UV_WindDir(): This function is responsible for obtaining the intensity of ultraviolet (UV) radiation and the direction of the wind. The ADS1115 module is used to read the analog value of the UV radiation sensor and then this value is mapped to a scale of 0 to 11 to represent the percentage of UV intensity. In addition, the ADS1115 module is also used to measure the analog value of the wind direction sensor. The `UV_WindDir()` function interprets the read value and determines the wind direction based on predefined ranges for different cardinal directions.

countPulse(): The `countPulse()` function is responsible for measuring the wind speed using an anemometer. The anemometer is designed to generate pulses when driven by the wind. Each time a pulse is detected, a counter representing the number of pulses generated by the anemometer in a specified time interval is incremented. The `loop()` function then calculates the wind speed from the number of pulses and a scale factor based on the anemometer's calibration.

Data Logging: Every five minutes, the sensor readings are saved to a CSV file on the SD card. The data includes the timestamp, temperature, humidity, thermal sensation, total rainfall, wind speed, wind direction, and UV intensity.

Raw Code

[ultimateprogram_weatherstation.rar](#)

From:
<https://student-wiki.eolab.de/> - **HSRW EOLab Students Wiki**

Permanent link:
<https://student-wiki.eolab.de/doku.php?id=amc:ss2023:group-u:start&rev=1690142772>

Last update: **2023/07/23 22:06**

